

AutoProject for AutoCAD Help

Table Of Contents

AutoProject for AutoCAD Help	1
Introduction	2
Contact	3
License Agreement	4
ReadMe	11
Command Reference	13
APTop	14
APBottom.....	15
APFront.....	16
APBack	17
APRight.....	18
APLeft	19
APIso1	20
APIso2	21
APIso3	22
APIso4	23
APIso5	24
APIso6	25
APIso7	26
APIso8	27
APHelp	28
APRegister	29
APAbout	31
Tutorials	32
Tutorial - 1 - Getting Started	33
Tutorial - 2 - View Drawing in Different Directions	42

AutoProject for AutoCAD Help

Welcome to *AutoProject for AutoCAD* Help!

This help file provides all the information you need to understand and use *AutoProject for AutoCAD*. Click the links below or use the Contents tab on the left to browse help topics. You can also scroll the topics on the above right-hand pane.

The *AutoProject for AutoCAD* help file is divided into the following sections:

- [Introduction](#) - Introduction to *AutoProject for AutoCAD*.
- [Command Reference](#) - Quick reference of all the commands in *AutoProject for AutoCAD*.
- [Tutorials](#) - Tutorials to get you started in the shortest possible time.

If you need any additional information please [contact](#) SYCODE.

Note:

- If you have trouble loading the *AutoProject for AutoCAD* plug-in file into the AutoCAD environment please refer to the [ReadMe](#) file.
- Please read the [license agreement](#) before using the software.

Introduction

AutoProject for AutoCAD is an automatic 2D projection generation plug-in for AutoCAD. This plug-in gives AutoCAD the ability to automatically create precise 2D projections views of 3D objects.

AutoCAD users often find themselves in a position wherein they have to create 2D views of their 3D models. Newer versions of AutoCAD have commands to create projection views, but these commands are limited to are 3D solids and surfaces only. There are no commands to project normal 3D curves such as line, polylines, arcs, circles, splines and other objects like meshes, faces, points, etc. *AutoProject for AutoCAD* removes this limitation and gives AutoCAD the ability to project almost any object onto a 2D plane.

AutoProject for AutoCAD is capable of projecting 3D objects to the six standard orthographic views (top, bottom, front, back, right and left) as well as the 8 standard isometric views, one for each octant.

AutoProject for AutoCAD is designed to work with the following versions of AutoCAD:

- AutoCAD 2010 (32 & 64 Bit)
- AutoCAD 2009 (32 & 64 Bit)
- AutoCAD 2008 (32 & 64 Bit)
- AutoCAD 2007
- AutoCAD 2006
- AutoCAD 2005
- AutoCAD 2004
- AutoCAD 2002
- AutoCAD 2000i
- AutoCAD 2000

AutoProject for AutoCAD is very easy to use. Once installed, it must be loaded into the AutoCAD environment. There are simple instructions for this in the ReadMe file. Once loaded it adds new commands to AutoCAD's existing commands and a new submenu called "AutoProject" to the AutoCAD menu containing these newly added commands.

AutoProject for AutoCAD comes with detailed documentation for each command as well as a [tutorials](#) to get you started in the shortest possible time.

If you need any additional information please [contact](#) SYCODE.

Contact

Mailing address	S1/116, Nova Cidade Complex, NH 17, Alto Porvorim, Goa - 403521 India
Phone	+91 9822689298
Fax	+91 832 2416615
E-Mail	info@sycode.com
Web Site	http://www.sycode.com

License Agreement

SYCODE END USER LICENSE AGREEMENT

READ CAREFULLY: SYCODE LICENSES THIS SOFTWARE TO YOU ONLY UPON THE CONDITION THAT YOU ACCEPT ALL OF THE TERMS CONTAINED IN THIS SOFTWARE LICENSE AGREEMENT.

BY SELECTING THE "I ACCEPT" BUTTON AT THE END OF THIS AGREEMENT OR BY COPYING, INSTALLING, UPLOADING, ACCESSING OR USING ALL OR ANY PORTION OF THE SOFTWARE YOU AGREE TO ENTER INTO THIS AGREEMENT. A CONTRACT IS THEN FORMED BETWEEN SYCODE AND EITHER YOU PERSONALLY, IF YOU ACQUIRE THE SOFTWARE FOR YOURSELF, OR THE COMPANY OR OTHER LEGAL ENTITY FOR WHICH YOU ARE ACQUIRING THE SOFTWARE.

IF YOU DO NOT AGREE OR DO NOT WISH TO BIND YOURSELF OR THE ENTITY YOU REPRESENT: (A) DO NOT COPY, INSTALL, DOWNLOAD, ACCESS OR USE THE SOFTWARE; (B) SELECT "I REJECT" AT THE END OF THIS AGREEMENT (WHICH WILL CANCEL THE LOADING OF THE SOFTWARE); AND (C) WITHIN THIRTY (30) DAYS FROM THE DATE OF ACQUISITION, RETURN THE SOFTWARE TO THE LOCATION WHERE YOU ACQUIRED IT FOR A REFUND.

COPYING OR USE OF THIS SOFTWARE OR ANY ACCOMPANYING DOCUMENTATION EXCEPT AS PERMITTED BY THIS AGREEMENT IS UNAUTHORIZED AND CONSTITUTES A MATERIAL BREACH OF THIS AGREEMENT AND AN INFRINGEMENT OF THE COPYRIGHT AND OTHER INTELLECTUAL PROPERTY RIGHTS IN SUCH SOFTWARE AND DOCUMENTATION. IF YOU COPY OR USE ALL OR ANY PORTION OF THIS SOFTWARE OR ITS USER DOCUMENTATION WITHOUT ENTERING INTO THIS AGREEMENT OR OTHERWISE OBTAINING WRITTEN PERMISSION OF SYCODE, YOU ARE VIOLATING COPYRIGHT AND OTHER INTELLECTUAL PROPERTY LAW. YOU MAY BE LIABLE TO SYCODE AND ITS LICENSORS FOR DAMAGES, AND YOU MAY BE SUBJECT TO CRIMINAL PENALTIES.

1. DEFINITIONS

1.1 "Access" means to use or benefit from using the functionality of the Software.

1.2 "Computer" means a single electronic device with one or more central processing units (CPUs) that accepts information in digital or similar form and manipulates the information for a specific result based on a sequence of instructions.

1.3 "Install" means to place a copy of Software onto a hard disk or other storage medium through any means (including, but not limited to, use of an installation utility application accompanying the Software).

1.4 "License Parameters" means the definition and limitation of the applicable license scope in Section 2.2 hereof.

1.5 "Permitted Number" means a number relevant for the applicable License Parameters that SYCODE may specify in the applicable User Documentation. The Permitted Number is one (1) unless otherwise provided by SYCODE in writing.

1.6 "Software" means the computer program in which this Agreement is embedded or that is delivered prepackaged with this Agreement.

1.7 "User Documentation" means the explanatory printed or electronic materials that SYCODE or its authorized distributor incorporates in or delivers in or on a package with the Software or sends to You on an invoice, via email, facsimile or otherwise after You acquire or Install the Software, including, but not limited to, license specifications, activation key, license files, instructions on how to use the Software, and/or technical specifications.

1.8 "You" means you personally (i.e., the individual who reads and is prompted to accept this Agreement) if you acquire the Software for yourself or the company or other legal entity for whom you acquire the Software.

2. SOFTWARE LICENSE

2.1 License Grant. SYCODE grants You a non-sublicensable, non-exclusive, non-transferable, limited license to use copies of the Software in the jurisdiction in which you acquire the Software, in accordance with the applicable User Documentation, within the scope of the License Parameters. SYCODE's license grant is conditioned on Your continuous compliance with all license limitations and restrictions described in this Agreement. If You violate any of these limitations or restrictions, the license grant will automatically and immediately expire. The license descriptions in this Section 2 define the scope of rights that SYCODE grants to You. Any usage of the Software outside the scope of the applicable license grant constitutes an infringement of SYCODE's intellectual property rights as well as a material breach of this Agreement.

2.2 License Parameters. SYCODE's license grant is subject to one or more of the License Parameters defined in this Section 2.2 as specified in the User Documentation. Unless SYCODE expressly specifies or agrees otherwise in the User Documentation, all Software shall be governed solely by a license for Standalone (Individual) Versions (see Section 2.2.1).

2.2.1 Standalone (Individual) Version. If SYCODE identifies the Software as a "Standalone Version" or as an "Individual Version" or if the User Documentation does not identify the Software by any of the version designations set forth in Sections 2.2.2 through 2.2.6, You may Install and Access one (1) copy of the Software on one (1) individual Computer, which may not be connected to a network in a manner that allows more than one (1) user to access, upload, operate, view or otherwise create or use a copy of the Software. You may not install or access the Software other than on one (1) computer at a time.

2.2.2 Network Version. If SYCODE identifies the Software as a "Network Version" in the applicable User Documentation, You may Install, Access and use one (1) copy of the Software on Your Computer file server, for Your own internal business needs, with the SYCODE License Manager tool. The Software may be Installed on or Accessed by other Computers, or on an individual Computer, as a multiple-user installation, so long as the

maximum number of concurrent users does not to exceed the Permitted Number.

2.2.3 Educational Institutional Version. If SYCODE identifies the Software as an "Educational Institutional Version" in the applicable User Documentation, You may Install and Access a single copy of the Software on up to the Permitted Number of Computers, only for educational purposes (as further specified in the applicable User Documentation) and for no other purpose. Without limiting the foregoing, Educational Institutional Versions of the Software may not be used for commercial, professional, or for-profit purposes. Additionally, functional limitations apply, as set forth in Section 6.

2.2.4 Student Version. If SYCODE identifies the Software as a "Student Version" in the applicable User Documentation, You may Install and Access a single copy of the Software on up to the Permitted Number of Computers, only for personal learning purposes, and no other purpose. Unless otherwise provided by SYCODE in the User Documentation, Student Versions of the Software may be used for a period of one (1) year from the date of Installation. Without limiting the foregoing, Student Versions of the Software may not be used for commercial, professional or other for-profit purposes and may only be used by persons who qualify as a permitted user of Student Versions (as further specified in the applicable User Documentation for the jurisdiction in which the Software is acquired). Additionally, functional limitations apply, as set forth in Section 6.

2.2.5 Evaluation Version. If SYCODE identifies the Software as a demonstration, evaluation, trial, or not for resale version ("Evaluation Version") in the applicable User Documentation, You may Install and Access one copy of the Software only for the purpose of commercial evaluation and demonstration. Without limiting the foregoing, You may not use it for competitive analysis, or commercial, professional, or for-profit purposes. The Evaluation Version may only be Installed for a ten (10) day evaluation period, unless otherwise specified by SYCODE in writing. Additionally, functional limitations apply, as set forth in Section 6.

2.2.6 License Term. Subject to the terms and conditions of this Agreement, the license to use the Software is perpetual, unless the Software qualifies as an Evaluation Version, Student Version, or is designated as a fixed-term license, a limited duration license or a rental license. In such case, the term of the license shall be the term identified by SYCODE in the applicable User Documentation (the "Designated Term") or the term for which You have paid, whichever is less. If SYCODE identifies the Software as licensed for a fixed term, limited duration or rental and does not specify a term, then the Designated Term shall expire thirty (30) days after the date You first Install the Software. Use of this Software beyond the applicable license term, or any attempt to defeat the time-control disabling function in the Software is an unauthorized use and constitutes a material violation of this Agreement and intellectual property law.

2.3 Software Components. The Software is licensed to You as a single product and its components may not be separated for distribution or use on more than one (1) Computer unless expressly permitted by SYCODE in the applicable User Documentation.

3. PERMITTED AND PROHIBITED ACTIONS

3.1 Permitted Actions

3.1.1 Backup Copy. Regardless of which version of the Software You have acquired, You may Install one archival (backup) copy of the Software. Such archival copy may not be

Installed on another Computer, unless such other Computer is a partitioned drive of a server to which only the user of the active copy of the Software can Access. In any event, the archival copy may not be Accessed as long as another copy of the Software is Installed on any Computer. Except as expressly permitted under Section 2.2: (a) if the User Documentation is in printed form, it may not be copied; and (b) if the User Documentation is in electronic form, it may not be duplicated electronically.

3.1.2 Additional Installation. Except with regard to Educational Institutional, Student and Evaluation Versions only, You may Install and Access a second copy of the Software on the hard disk of a second Computer owned by You or under Your control provided that:

(i) the original and second copies are used only by the same person;

(ii) the second copy is Installed and Accessed only on either (a) with respect to Network Versions, a redundant server that makes the Software available for use only when Your primary server on which the active Software copy is Installed becomes inoperable, or (b) a notebook computer or other non-server computer away from Your usual work location for the purpose of enabling You to perform work while away from Your usual work location;

(iii) only one of the Software copies is Accessed at any one time; and

(iv) both copies of the Software are Installed and Accessed exclusively with the copy protection device (if any) supplied with the Software.

(v) You have an active Subscription for the Software.

3.2 Prohibited Actions. SYCODE does not permit any of the following actions and You acknowledge that such actions shall be prohibited:

3.2.1 Use. You may not Install, Access or otherwise copy or use the Software or User Documentation except as expressly authorized by this Agreement.

3.2.2 Reverse Engineering. You may not reverse engineer, decompile, or disassemble the Software.

3.2.3 Transfers. You may not distribute, rent, loan, lease, sell, sublicense, or otherwise transfer all or any portion of the Software or User Documentation, or any rights granted in this Agreement, to any other person without the prior written consent of SYCODE.

3.2.4 Hosting or Third Party Use. You may not Install or Access, or allow the Installation or Access of, the Software over the Internet, including, without limitation, use in connection with a Web hosting or similar service, or make the Software available to third parties via the Internet on Your computer system or otherwise.

3.2.5 Distribution. You may not distribute the Software to another party, without prior written permission from SYCODE. Distribution includes, but is not limited to, sending the Software by electronic mail, placing the Software on a web server or a similar on-line source, including the software on a CD or any other media or any other distribution mechanism.

3.2.6 Notices. You may not remove, alter, or obscure any proprietary notices, labels, or marks from the Software or User Documentation.

3.2.7 Modifications. You may not modify, translate, adapt, arrange, or create derivative works based on the Software or User Documentation for any purpose.

3.2.8 Circumvention. You may not utilize any equipment, device, software, or other means designed to circumvent or remove any form of copy protection used by SYCODE in connection with the Software, or use the Software together with any, activation code, serial number, or other copy protection device not supplied by SYCODE directly or through an authorized distributor.

3.2.9 Export. You may not export the Software or User Documentation in violation of this Agreement, Indian or other applicable export control laws.

4. ALL RIGHTS RESERVED

Except as expressly provided otherwise in this Agreement, title, ownership and all rights and interest including, without limitation, copyrights, in and to the Software and User Documentation and any authorized copies made by You remain with SYCODE and its licensors. The structure, organization, and code of the Software are valuable trade secrets of SYCODE and its licensors and You shall keep such trade secrets confidential. The Software and User Documentation are licensed, not sold.

5. DISCLAIMER

ANY STATEMENTS OR REPRESENTATIONS ABOUT THE SOFTWARE AND ITS FUNCTIONALITY IN THE USER DOCUMENTATION OR ANY COMMUNICATION WITH YOU CONSTITUTE TECHNICAL INFORMATION AND NOT AN EXPRESS WARRANTY OR GUARANTEE. IN ADDITION, SYCODE SPECIFICALLY DISCLAIMS ANY OTHER WARRANTY INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. WITHOUT LIMITING THE FOREGOING, SYCODE DOES NOT WARRANT THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR FREE.

6. WARNINGS

6.1 Functionality Limitations. COMPUTER AIDED DESIGN SOFTWARE AND OTHER TECHNICAL SOFTWARE ARE TOOLS INTENDED TO BE USED BY TRAINED PROFESSIONALS ONLY. THEY ARE NOT SUBSTITUTES FOR YOUR PROFESSIONAL JUDGMENT. COMPUTER AIDED DESIGN SOFTWARE AND OTHER TECHNICAL SOFTWARE ARE INTENDED TO ASSIST WITH PRODUCT DESIGN AND ARE NOT SUBSTITUTES FOR INDEPENDENT TESTING OF PRODUCT STRESS, SAFETY AND UTILITY. DUE TO THE LARGE VARIETY OF POTENTIAL APPLICATIONS FOR THE SOFTWARE, THE SOFTWARE HAS NOT BEEN TESTED IN ALL SITUATIONS UNDER WHICH IT MAY BE USED. SYCODE SHALL NOT BE LIABLE IN ANY MANNER WHATSOEVER FOR THE RESULTS OBTAINED THROUGH THE USE OF THE SOFTWARE. PERSONS USING THE SOFTWARE ARE RESPONSIBLE FOR THE SUPERVISION, MANAGEMENT AND CONTROL OF THE SOFTWARE. THIS RESPONSIBILITY INCLUDES, BUT IS NOT LIMITED TO, THE DETERMINATION OF APPROPRIATE USES FOR THE SOFTWARE AND THE SELECTION OF THE SOFTWARE AND OTHER PROGRAMS TO ACHIEVE INTENDED RESULTS. PERSONS USING THE SOFTWARE ARE ALSO RESPONSIBLE FOR ESTABLISHING THE ADEQUACY OF INDEPENDENT PROCEDURES FOR TESTING THE RELIABILITY AND ACCURACY OF ANY

PROGRAM OUTPUT, INCLUDING ALL ITEMS DESIGNED BY USING THE SOFTWARE.

6.2 Activation Key Required.

6.2.1 INSTALLATION, ACCESS, TRANSFERS AND CONTINUED USE OF THE SOFTWARE MAY REQUIRE AN ACTIVATION KEY. YOU MUST REGISTER YOUR ACQUISITION OF THE SOFTWARE WITH SYCODE BEFORE AN ACTIVATION KEY IS ISSUED TO YOU.

6.2.2 THE ACTIVATION SECURITY MECHANISMS MAY DISABLE THE SOFTWARE IF YOU TRY TO TRANSFER IT TO ANOTHER COMPUTER, IF YOU TAMPER WITH THE DATE SETTING MECHANISMS ON YOUR COMPUTER, IF YOU USE THE SOFTWARE PAST AN APPLICABLE EVALUATION PERIOD OR LIMITED TERM, OR IF YOU UNDERTAKE CERTAIN OTHER ACTIONS THAT MAY OFFSET THE SECURITY MODE. MORE INFORMATION IS CONTAINED IN THE APPLICABLE USER DOCUMENTATION OR AVAILABLE FROM SYCODE ON REQUEST.

7. LIMITATION OF LIABILITY

IN NO EVENT SHALL SYCODE OR ITS LICENSORS HAVE ANY LIABILITY FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS, REVENUE, DATA, OR COST OF COVER. IN ADDITION, IN NO EVENT SHALL THE LIABILITY OF SYCODE OR ITS LICENSORS FOR ANY DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THIS AGREEMENT EXCEED THE AMOUNT PAID OR PAYABLE BY YOU FOR THE SOFTWARE PRINCIPALLY RESPONSIBLE FOR SUCH DAMAGES. THE LIMITATIONS OF LIABILITY IN THIS SECTION 7 SHALL APPLY TO ANY DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, WHETHER DERIVED FROM CONTRACT, TORT (INCLUDING, BUT NOT LIMITED TO, NEGLIGENCE), OR OTHERWISE, EVEN IF SYCODE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND REGARDLESS OF WHETHER THE LIMITED REMEDIES AVAILABLE HEREUNDER FAIL OF THEIR ESSENTIAL PURPOSE.

8. GENERAL

8.1. No Assignment; Insolvency. This Agreement and any rights hereunder are non-assignable and any purported assignment shall be void. The Agreement and the licenses granted hereunder shall terminate without further notice or action by SYCODE if You become bankrupt or insolvent, make an arrangement with Your creditors or go into liquidation.

8.2. Choice of Law. This Agreement and any disputes arising out of or in connection with this Agreement shall be governed by the laws of the state of Goa in India without reference to conflict-of-laws principles and excluding the UN Convention on Contracts for the International Sale of Goods.

8.3 Entire Agreement. This Agreement and the applicable User Documentation constitute the entire agreement between You and SYCODE and supersede any other previous or contemporaneous communications, agreements, representations, or advertising with respect to the Software and User Documentation.

8.4 Severability. If and to the extent any provision of this Agreement is held illegal,

invalid, or unenforceable in whole or in part under applicable law, such provision or such portion thereof shall be ineffective as to the jurisdiction in which it is illegal, invalid, or unenforceable to the extent of its illegality, invalidity, or unenforceability and shall be deemed modified to the extent necessary to conform to applicable law so as to give the maximum effect to the intent of the parties. The illegality, invalidity, or unenforceability of such provision in that jurisdiction shall not in any way affect the legality, validity, or enforceability of any other provision of this Agreement in any other jurisdiction.

8.5 Audits. To ensure compliance with this Agreement, You agree that upon reasonable notice, SYCODE or SYCODE's authorized representative shall have the right to inspect and audit Your Installation, Access and use of the Software. Any such inspection or audit shall be conducted during regular business hours at Your facilities or electronically. If such inspections or audits disclose that You have Installed, Accessed or permitted Access to the Software on Computer(s) in a manner that is not permitted under this Agreement, then SYCODE may terminate this Agreement immediately and You are liable to pay for any unpaid license fees as well as the reasonable costs of the audit. Nothing in this section shall be deemed to limit any legal or equitable remedies available to SYCODE for violation of this Agreement or applicable law.

8.6 Language. The English language version of this Agreement is legally binding in case of any inconsistencies between the English version and any translations.

ReadMe

This is the *AutoProject for AutoCAD* ReadMe file.

Thank you for installing AutoProject for AutoCAD.

Please read this ReadMe document carefully and completely. It contains important information which is vital to the proper working of AutoProject for AutoCAD.

Since AutoProject for AutoCAD is a plug-in for AutoCAD, it has to be loaded into the AutoCAD environment before it can be used. Loading is a one time process. AutoProject for AutoCAD will automatically load itself into AutoCAD the next time you run AutoCAD.

The AutoProject for AutoCAD plug-in files are installed into the AutoProject for AutoCAD installation folder (typically "C:\Program Files\SYCODE\AutoProject for AutoCAD\"). The plug-in files have an extension of ".arx".

The list of plug-in files along with the version of AutoCAD is shown below. Please be sure to use the plug-in file that corresponds to your version of AutoCAD.

```
AutoProject_VC60.arx    -> AutoCAD 2000, 2000i, 2002
AutoProject_VC70.arx    -> AutoCAD 2004, 2005, 2006
AutoProject_VC80.arx    -> AutoCAD 2007, 2008 (32 Bit), 2009 (32 Bit)
AutoProject_VC80x64.arx -> AutoCAD 2008 (64 Bit), 2009 (64 Bit)
AutoProject_VC90.arx    -> AutoCAD 2010 (32 Bit)
AutoProject_VC90x64.arx -> AutoCAD 2010 (64 Bit)
AutoProject_VC90.arx    -> AutoCAD 2011 (32 Bit)
AutoProject_VC90x64.arx -> AutoCAD 2011 (64 Bit)
```

To load AutoProject for AutoCAD into AutoCAD please follow the steps listed below:

- (1) Select "Load Application..." from "Tools" menu or enter the "_APLOAD" command.
- (2) Click the "Contents" button in "Startup Suite"
- (3) Click the "Add" button.
- (4) Browse for the plug-in file for your version of AutoCAD (see list above).
- (5) Click the "Add" button on the Add File to Startup Suite dialog box.
- (6) Click the "Close" button to close the Startup Suite dialog box.
- (7) Click the "Close" button to close the Load/Unload Applications dialog box.

Now AutoProject for AutoCAD is completely installed and ready for use.

Usage:
=====

AutoProject for AutoCAD Help

AutoProject for AutoCAD adds new commands to AutoCAD. To differentiate these new commands from other commands, they all begin with "AP", which stands for "Auto Project". A new menu called "AutoProject" is added to the AutoCAD menu containing these newly added commands. The commands added are:

- 1) APTop - Projects to the top orthographic view
- 2) APBottom - Projects to the bottom orthographic view
- 3) APFront - Projects to the front orthographic view
- 4) APBack - Projects to the back orthographic view
- 5) APRight - Projects to the right side orthographic view
- 6) APLeft - Projects to the left side orthographic view
- 7) APIso1 - Projects to the 1st octant isometric view (Right, Back, Top)
- 8) APIso2 - Projects to the 2nd octant isometric view (Left, Back, Top)
- 9) APIso3 - Projects to the 3rd octant isometric view (Left, Front, Top)
- 10) APIso4 - Projects to the 4th octant isometric view (Right, Front, Top)
- 11) APIso5 - Projects to the 5th octant isometric view (Right, Back, Bottom)
- 12) APIso6 - Projects to the 6th octant isometric view (Left, Back, Bottom)
- 13) APIso7 - Projects to the 7th octant isometric view (Left, Front, Bottom)
- 14) APIso8 - Projects to the 8th octant isometric view (Right, Front, Bottom)
- 15) APHelp - Display the AutoProject for AutoCAD help file
- 16) APRegister - Register your copy of AutoProject for AutoCAD
- 17) APAbout - Display the AutoProject for AutoCAD about box

The AutoProject for AutoCAD help file is a good place to start.

Support:

=====

For support, please E-Mail support@sycode.com

Command Reference

AutoProject for AutoCAD adds a new menu to the AutoCAD menu called 'AutoProject'. The AutoProject menu consists of the following commands:

APTop	Projects to the top orthographic view
APBottom	Projects to the bottom orthographic view
APFront	Projects to the front orthographic view
APBack	Projects to the back orthographic view
APRight	Projects to the right side orthographic view
APLeft	Projects to the left side orthographic view
APIso1	Projects to the 1st octant isometric view (Right, Back, Top)
APIso2	Projects to the 2nd octant isometric view (Left, Back, Top)
APIso3	Projects to the 3rd octant isometric view (Left, Front, Top)
APIso4	Projects to the 4th octant isometric view (Right, Front, Top)
APIso5	Projects to the 5th octant isometric view (Right, Back, Bottom)
APIso6	Projects to the 6th octant isometric view (Left, Back, Bottom)
APIso7	Projects to the 7th octant isometric view (Left, Front, Bottom)
APIso8	Projects to the 8th octant isometric view (Right, Front, Bottom)
APHelp	Display the AutoProject for AutoCAD help file
APRegister	Register your copy of AutoProject for AutoCAD
APAbout	Display the AutoProject for AutoCAD about box

APTop

Menu Button	AutoProject > Top
Command	APTop

This command is used to project entities to get the top orthographic view.

APBottom

Menu Button	AutoProject > Bottom
Command	APBottom

This command is used to project entities to get the bottom orthographic view.

APFront

Menu Button	AutoProject > Front
Command	APFront

This command is used to project entities to get the front orthographic view.

APBack

Menu Button	AutoProject > Back
Command	APBack

This command is used to project entities to get the back orthographic view.

APRight

Menu Button	AutoProject > Right
Command	APRight

This command is used to project entities to get the right side orthographic view.

APLeft

Menu Button	AutoProject > Left
Command	APLeft

This command is used to project entities to get the left side orthographic view.

APIso1

Menu Button	AutoProject > Iso1 (Back, Right, Top)
Command	APIso1

This command is used to project entities to get the 1st octant perspective view. This is also known as the Right, Back, Top view.

APIso2

Menu Button	AutoProject > Iso2 (Left, Back, Top)
Command	APIso2

This command is used to project entities to get the 2nd octant perspective view. This is also known as the Left, Back, Top view.

APIso3

Menu Button	AutoProject > Iso3 (Left, Front, Top)
Command	APIso3

This command is used to project entities to get the 3rd octant perspective view. This is also known as the Left Front, Top view.

APIso4

Menu Button	AutoProject > Iso4 (Right, Front, Top)
Command	APIso4

This command is used to project entities to get the 4th octant perspective view. This is also known as the Right, Front, Top view.

APIso5

Menu Button	AutoProject > Iso5 (Right, Back, Bottom)
Command	APIso5

This command is used to project entities to get the 5th octant perspective view. This is also known as the Right, Back, Bottom view.

APIso6

Command Name	AutoProject > Iso6 (Left, Back, Bottom)
Menu Button	APIso6

This command is used to project entities to get the 6th octant perspective view. This is also known as the Left, Back, Bottom view.

APIso7

Menu Button	AutoProject > Iso7 (Left, Front, Bottom)
Command	APIso7

This command is used to project entities to get the 7th octant perspective view. This is also known as the Left, Front, Bottom view.

APIso8

Menu Button	AutoProject > Iso8 (Right, Front, Bottom)
Command	APIso8

This command is used to project entities to get the 8th octant perspective view. This is also known as the Right, Front, Bottom view.

APHelp

Command Name	APHelp
Menu Button	AutoProject > Help

This command displays the help file. The [Welcome](#) page is a good place to start.

APRegister

Menu Button	AutoProject > Register
Command	APRegister

This command is used to register your copy of *AutoProject for AutoCAD*.

You need a license key to start using the software. A license key can be of two types: Trial or Permanent. A trial key is issued to you instantly and completely free of cost so that you may try the software before you purchase a license. A permanent key is issued after you have purchased a license.

How do I get a Trial Key?

Simply click the 'Request Key' button and select 'TRIAL KEY' as the type of key being requested. Fill the form and submit it. A trial key will be immediately sent to you by email.

How do I get a Permanent Key?

To get a permanent key you need to have already purchased a license. If you have not yet purchased a license you can do so by clicking the 'Buy Online' button. After you place your order click the 'Request Key' button and select 'PERMANENT KEY' as the type of key being requested. Fill the form and submit it. Your order will be verified and a permanent key will be sent to you by email within one business day.

IMPORTANT:

(1) Please ensure that your computer is connected to the internet before you request for a

AutoProject for AutoCAD Help

key.

(2) Please be sure to enter a valid email address as the key will be sent to you by email.

 
(3) To avoid disruption in your work-flow we urge you to place your order before the trial period ends.

If you need anything else please send an email to register@sycode.com

APAbout

Command Name	APAbout
Menu Button	AutoProject > About

This command is used to display the *AutoProject for AutoCAD* About box. The About box lists the software and its version.

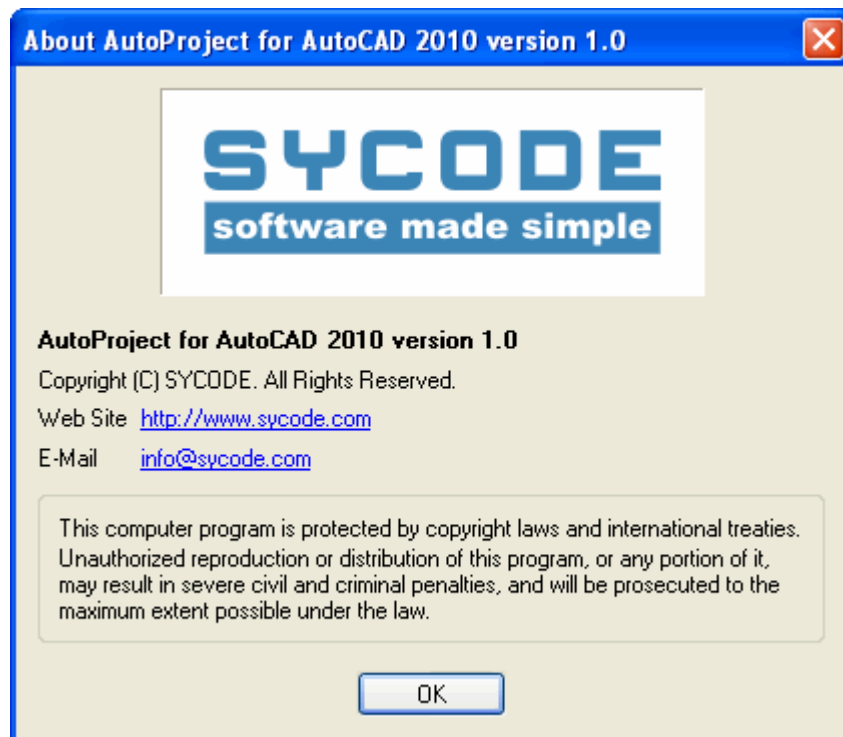

Tutorials

The purpose of these tutorials is to provide the necessary information and hands-on experience to enable you to use *AutoProject for AutoCAD*.

The tutorials are designed to get you started with *AutoProject for AutoCAD* in the shortest possible time.

[Tutorial 1](#): Getting Started

[Tutorial 2](#): View Drawing in Different Directions

Note: The file used in these tutorials can be found in the Samples folder. (Typically C:\Program Files\SYCODE\AutoProject for AutoCAD\Samples\)

Tutorial - 1 - Getting Started

The purpose of these tutorials is to provide the necessary information and hands-on experience to help you get started with *AutoProject for AutoCAD* in the shortest possible time.


Step 1: Start AutoCAD.

Step 2: Select *Open* from the AutoCAD file menu. Browse for the file C:\Program Files\SYCODE\AutoProject for AutoCAD\Samples\Sample 1.dwg and click *Open*.

Step 3: Select *Iso1 (Back, Right, Top)* from the "AutoProject" menu or type *APIso1* at the prompt.

Step 4: At the *Select entities to select* prompt, select the drawing and press *Enter*.

Step 5: At the *Pick insertion point* prompt, place the cursor where the isometric view to be inserted.

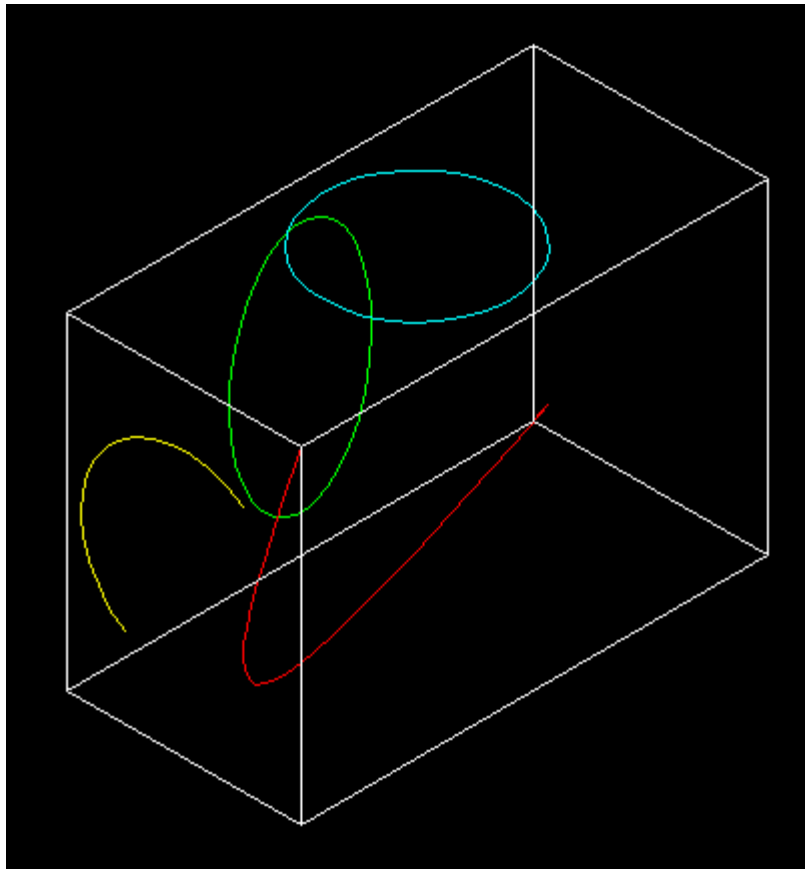


Iso1 (Back, Right, Top) View

AutoProject for AutoCAD Help

Step 6: Select *Iso2 (Left, Back, Top)* from the "AutoProject" menu or type *APIso2* at the prompt.


Step 7: Repeat Step 4 & 5.

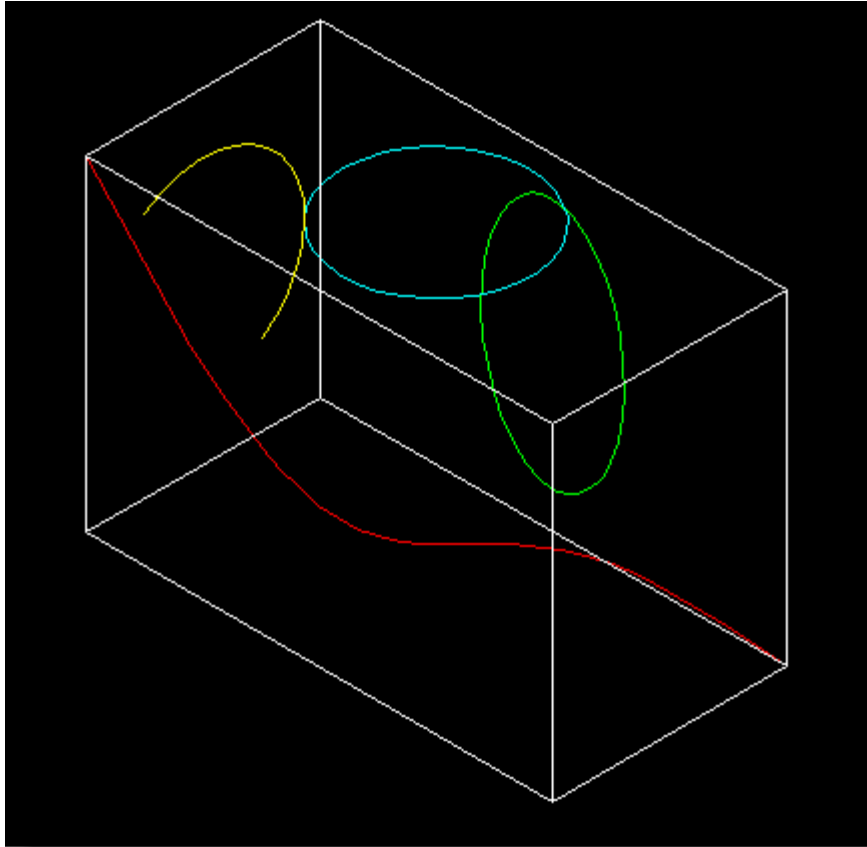

Iso2 (Left, Back, Top) View

Step 8: Select *Iso3 (Left, Front, Top)* from the "AutoProject" menu or type *APIso3* at the prompt.


Step 9: Repeat Step 4 & 5.

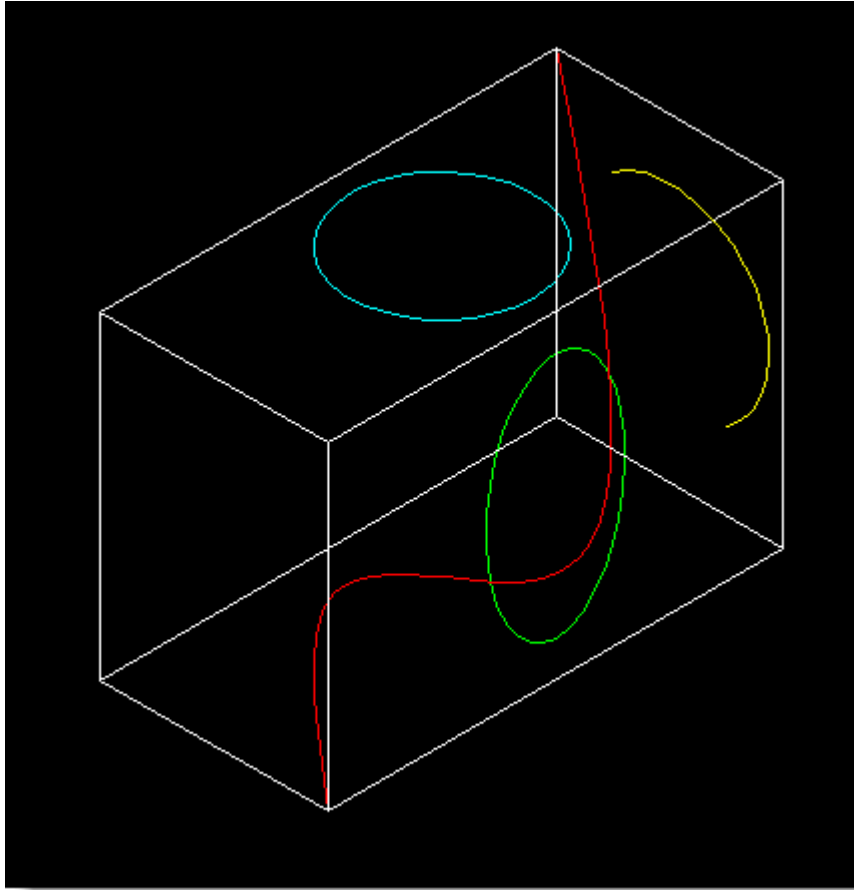

Iso3 (Left, Front, Top) View

Step 10: Select *Iso4 (Right, Front, Top)* from the "AutoProject" menu or type *APIso4* at the prompt.


Step 11: Repeat Step 4 & 5.

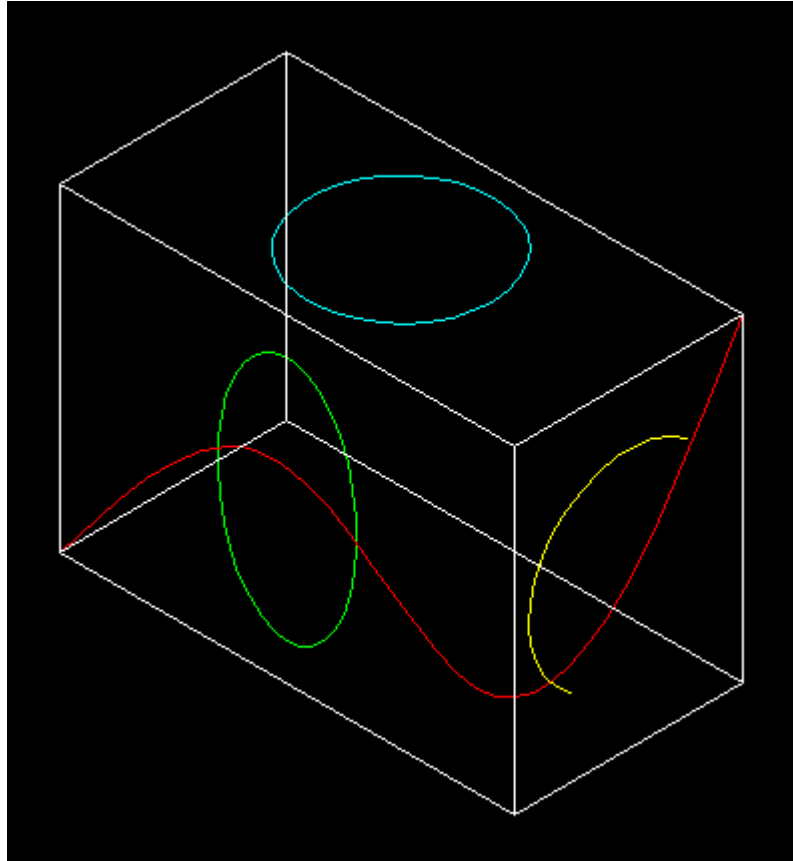

Iso4 (Right, Front, Top) View

Step 12: Select *Iso5 (Right, Back, Bottom)* from the "AutoProject" menu or type *APIso5* at the prompt.


Step 13: Repeat Step 4 & 5.

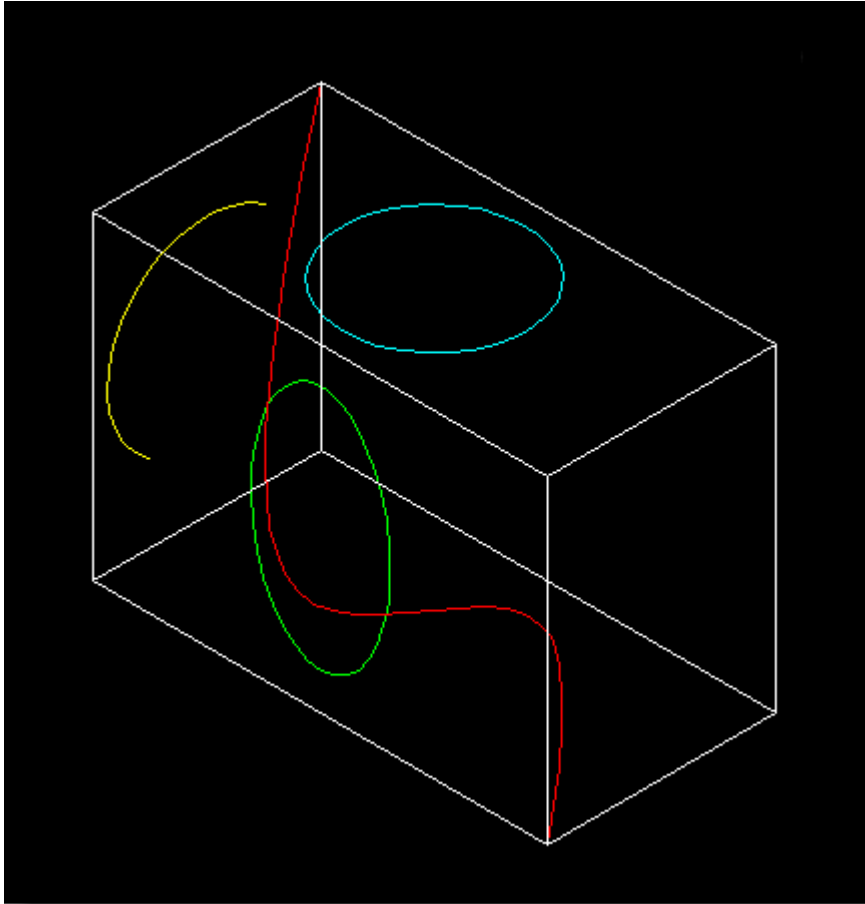

Iso5 (Right, Back, Bottom) View

Step 14: Select *Iso6 (Left, Back, Bottom)* from the "AutoProject" menu or type *APIso6* at the prompt.


Step 15: Repeat Step 4 & 5.

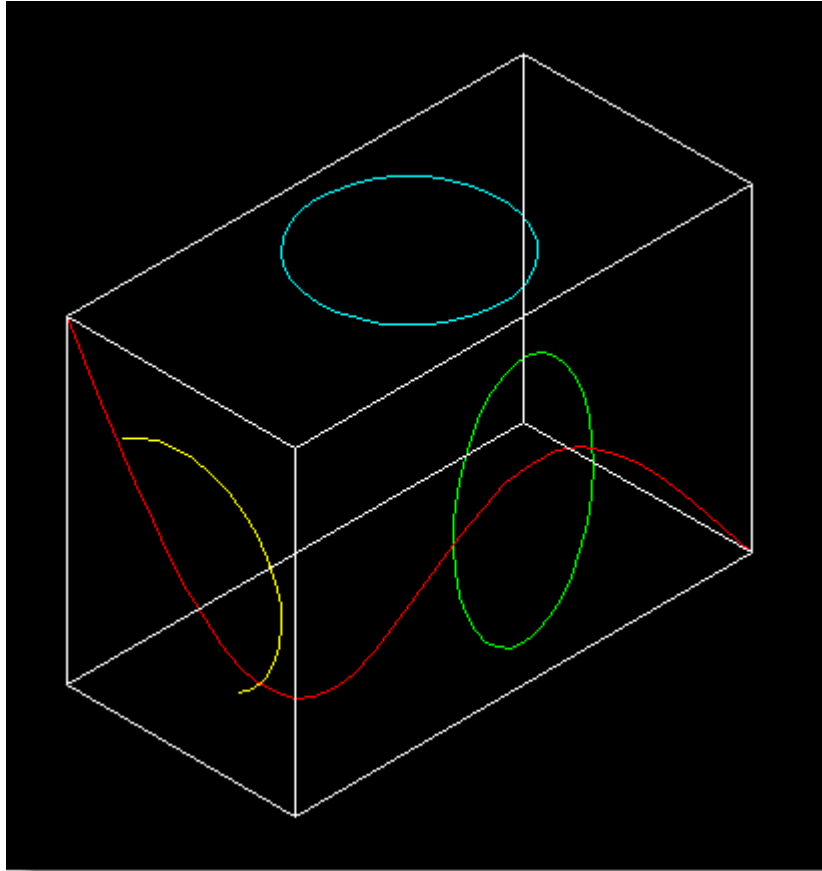

Iso6 (Left, Back, Bottom) View

Step 16: Select *Iso7 (Left, Front, Bottom)* from the "AutoProject" menu or type *APIso7* at the prompt.


Step 17: Repeat Step 4 & 5.

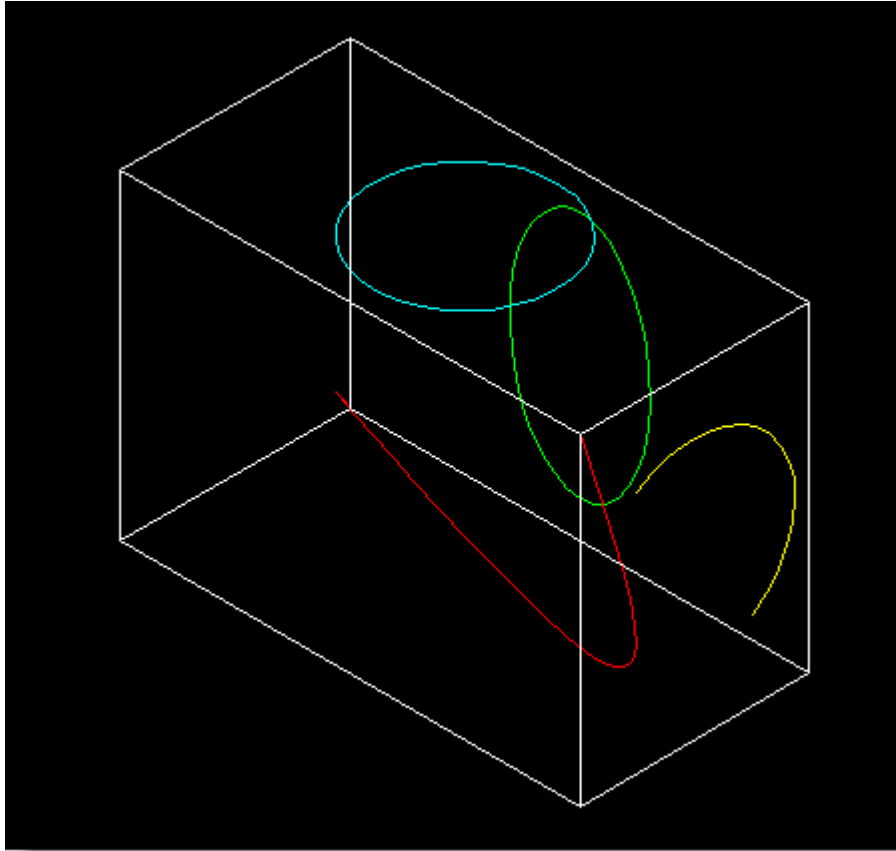

Iso7 (Left, Front, Bottom) View


Step 18: Select *Iso8 (Right, Front, Bottom)* from the "AutoProject" menu or type *APIso8* at the prompt.

Step 19: Repeat Step 4 & 5.

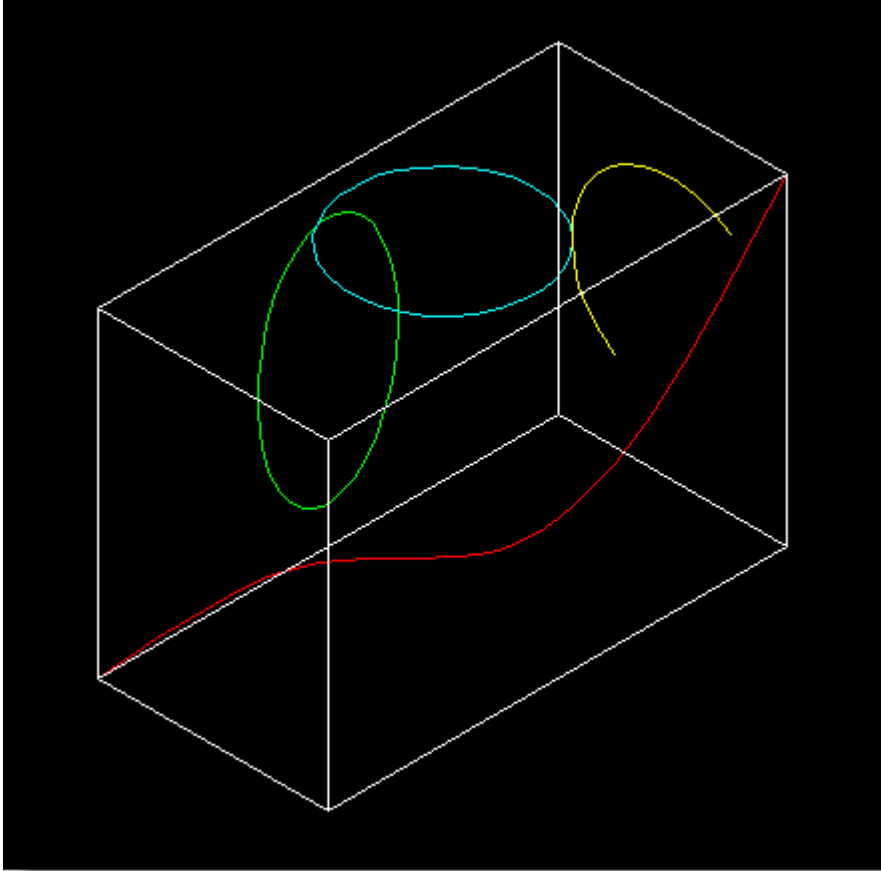

Iso8 (Right, Front, Bottom) View

 The final output in a different isometric view

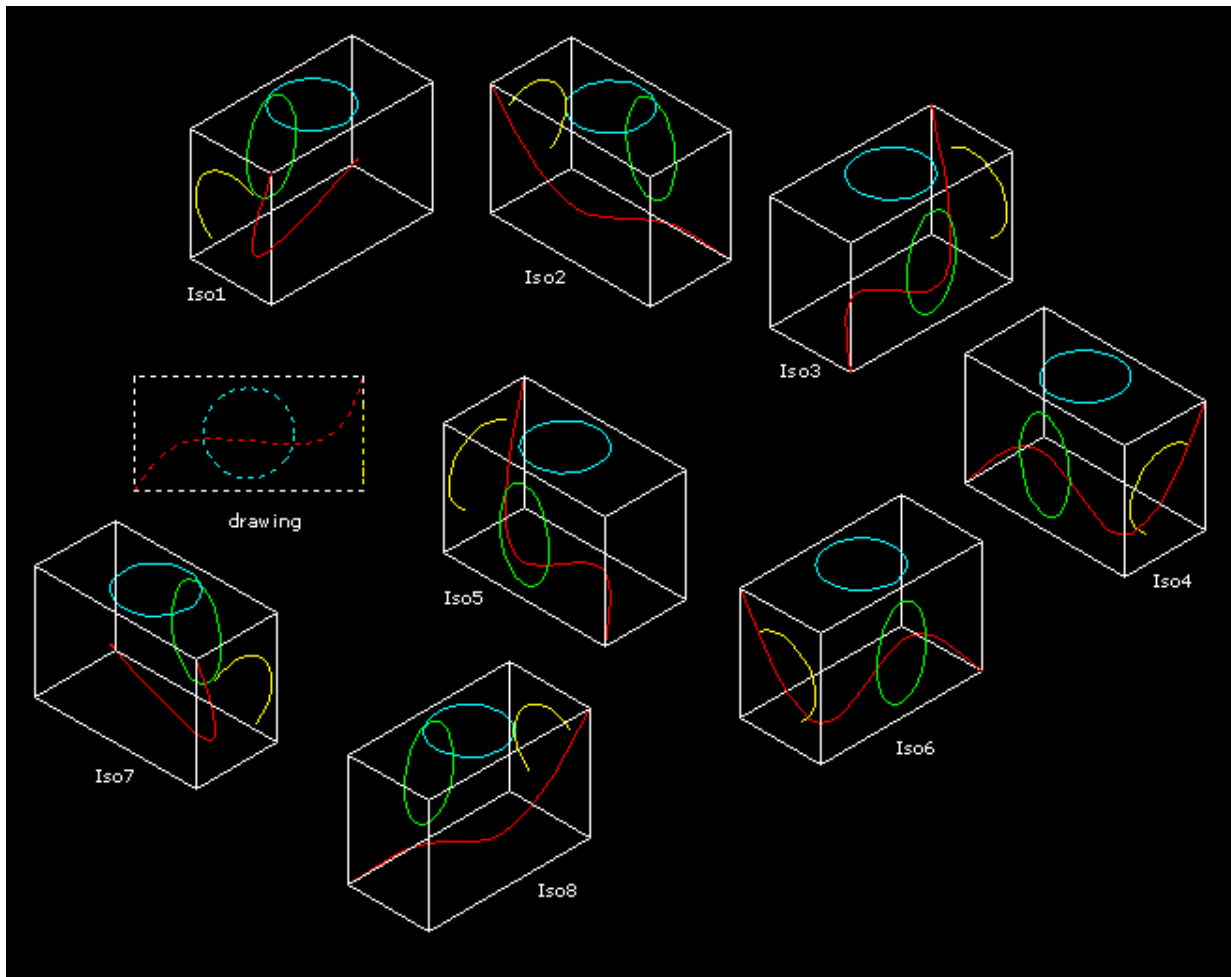

Tutorial - 2 - View Drawing in Different Directions

Tutorial 2 will show how to view a drawing in different directions in *AutoProject for AutoCAD*.


Step 1: Start AutoCAD.

Step 2: Select *Open* from the AutoCAD file menu. Browse for the file C:\Program Files\SYCODE\AutoProject for AutoCAD\Samples\Sample 1.dwg and click *Open*.

Step 3: Select *Top* from the "AutoProject" menu or type *APT* at the prompt.

Step 4: At the *Select entities to select* prompt, select the drawing and press *Enter*.


Step 5: At the *Pick insertion point* prompt, place the cursor where the isometric view to be inserted

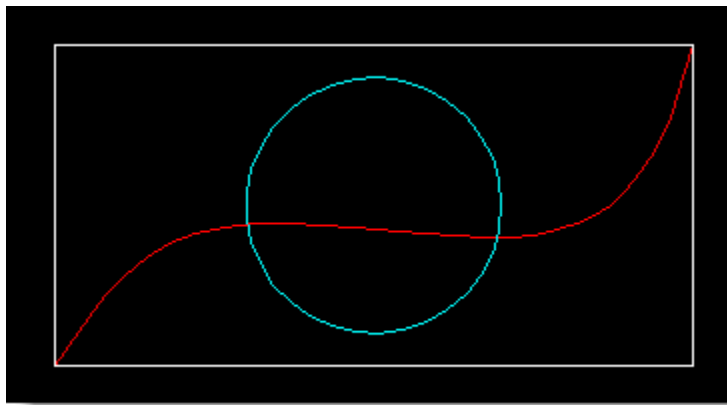

Top view

Step 6: Select *Bottom* from the "AutoProject" menu or type *APBottom* at the prompt.

 
Step 7: Repeat Step 4 & 5.

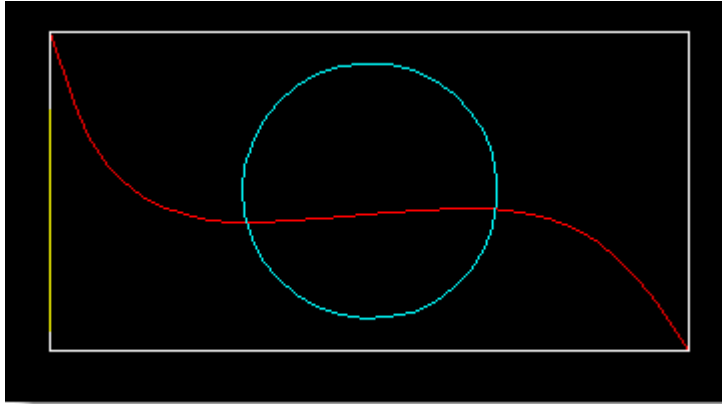

Bottom view

Step 8: Select *Front* from the "AutoProject" menu or type *APFront* at the prompt.


Step 9: Repeat Step 4 & 5.

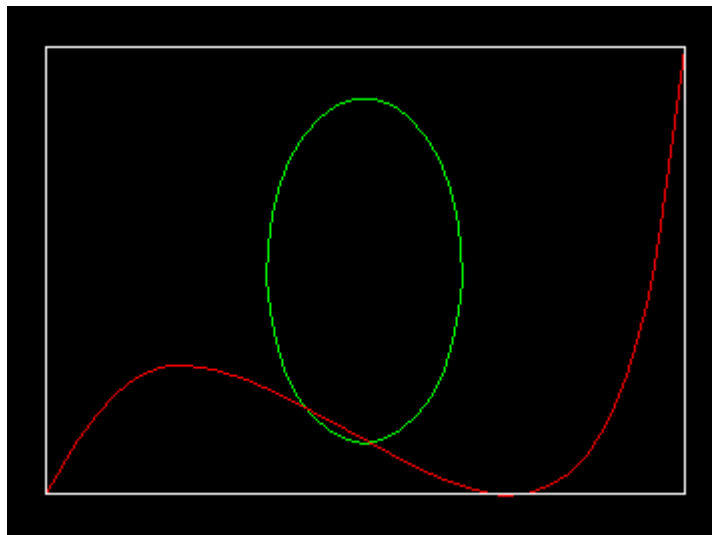

Front view

Step 10: Select *Back* from the "AutoProject" menu or type *APBack* at the prompt.


Step 11: Repeat Step 4 & 5.

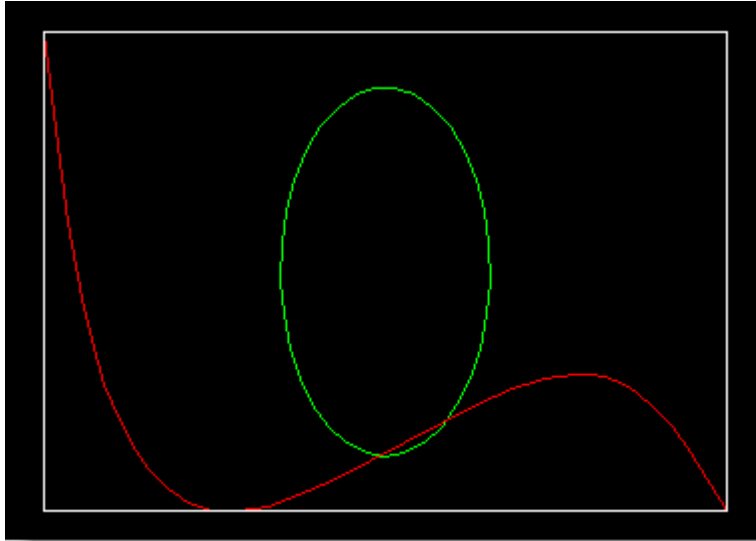

Back view

Step 12: Select *Right* from the "AutoProject" menu or type *APRight* at the prompt.

 
Step 13: Repeat Step 4 & 5.

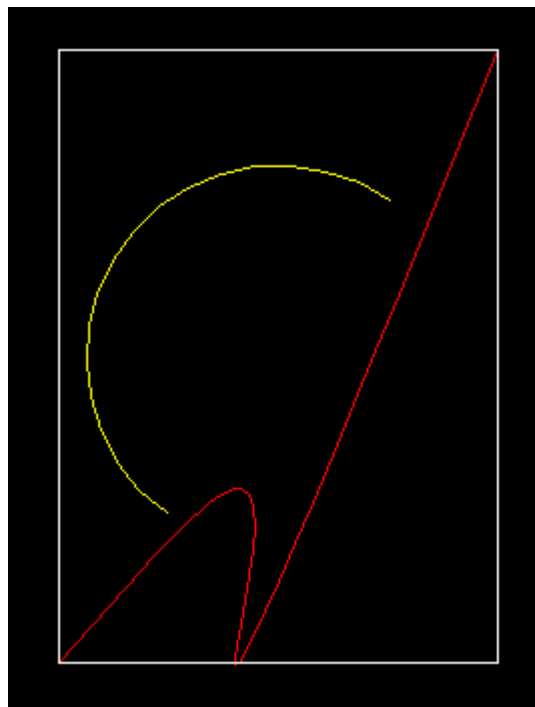

Right view

Step 14: Select *Left* from the "AutoProject" menu or type *APLeft* at the prompt.

 Step 15: Repeat Step 4 & 5.

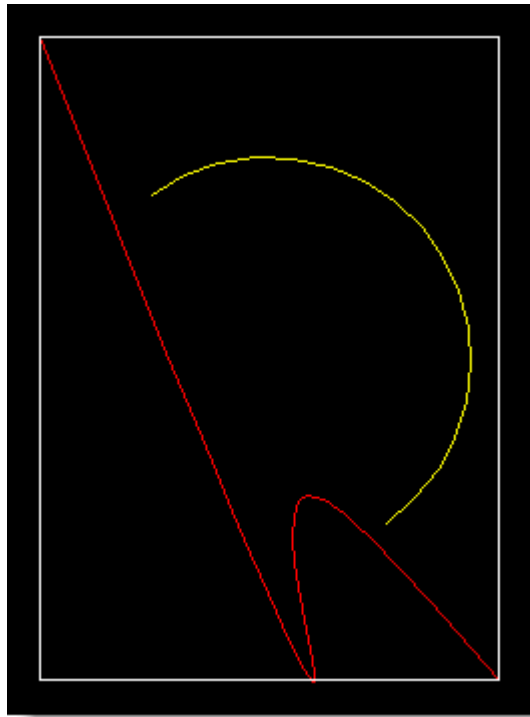

Left View

The final output in a different isometric view

